



PART NO.	PART NAME
1	Body
2	Screw Mandrel
3	Split Pin
4	Lever Handle Assembly
5	Washer
6	Nut

# BEAM CLAMP WITH RING OPERATING INSTRUCTIONS



## **INSTRUCTIONS FOR THE SAFE USE OF**

### **BEAM CLAMP WITH RING**

#### Using beam clamps safely

Ensure that the beam clamp is of the correct capacity for the load being lifted and that the beam will not be damaged by localised overloading.

Ensure that the clamp is fitted correctly over the centre of gravity of the item being lifted and will not be subjected to side loading.

Before lifting a load ensure that the clamp has been tightened and that the lifting appliance is fitted correctly into the eye of the clamp.

#### In-service inspection and maintenance

Ensure that beam clamps are kept clean and moving parts are lubricated.

Regularly inspect beam clamps for wear, damage, distortion, cracks and any defects likely to cause a danger.

If any of the above defects are found remove the beam clamp from service and refer to a competent person.

Capacity T	Beam Width MM	Max A	Min B	Max B	C	D	E	Max F	Min F	Min G	N.W. kg
1	75-230	240	192	367	94	4	194	154	102	20	4.2
2	75-230	240	192	367	102	6	194	154	102	20	5.1
3	80-345	355	243	520	132	8	241	223	133	47	10.4
5	80-345	355	243	520	142	10	241	223	133	47	12.2
10	90-350	360	272	532	180	12	284	234	155	56	18.8

