


Collared

MAXIMUM RECOMMENDED WORKING LOADS FOR BRITISH STANDARD EYEBOLTS (IMPERIAL AND METRIC THREADS) WHEN USED IN PAIRS FOR INCLINED LOADING CONDITIONS.

SAFE WORKING LOAD FOR A SINGLE EYEBOLT IN VERTICAL LIFT	MAXIMUM LOAD 'W' TO BE LIFTED BY A PAIR OF EYEBOLTS WHEN THE ANGLE Ø BETWEEN THE LEGS IS		
	0°<Ø>30°	30°<Ø>60°	60°<Ø>90°
TONNES	TONNES	TONNES	TONNES
0.25	0.32	0.20	0.13
0.40	0.50	0.32	0.20
0.50	0.63	0.40	0.25
0.80	1.00	0.64	0.40
0.90	1.13	0.72	0.45
1.00	1.30	0.80	0.50
1.25	1.60	1.00	0.63
1.40	1.76	1.12	0.70
1.60	2.00	1.25	0.80
2.00	2.50	1.60	1.00
2.50	3.20	2.00	1.25
2.75	3.47	2.20	1.38
3.20	4.00	2.50	1.60
3.50	4.41	2.80	1.75
4.00	5.00	3.20	2.00
4.50	5.67	3.60	2.25
5.00	6.30	4.00	2.50
6.30	8.00	5.00	3.20
6.50	8.19	5.20	3.25
8.00	10.00	6.30	4.00
9.00	11.34	7.20	4.50
10.00	12.50	8.00	5.00
12.00	15.12	9.60	6.00
12.50	16.00	10.00	6.30
15.00	18.90	12.00	7.50
16.00	20.00	12.50	8.00
20.00	25.20	16.00	10.00
25.00	32.00	20.00	12.50
30.00	37.80	24.00	15.00

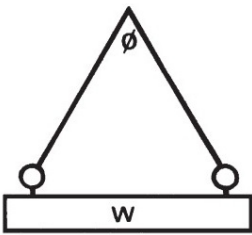


FOR TRUNNION LIFTING

The load taken by a single eyebolt should not exceed 25% of its marked SWL.

Collared with Reeveable Links

MAXIMUM RECOMMENDED WORKING LOADS FOR BRITISH STANDARD COLLAR EYEBOLTS WITH REEVABLE AND NON-REEVABLE EGG LINKS WHEN USED IN PAIRS FOR INCLINED LOADING CONDITIONS

SAFE WORKING LOAD FOR A SINGLE EYEBOLT IN VERTICAL LIFT	MAXIMUM LOAD 'W' TO BE LIFTED BY A PAIR OF EYEBOLTS WHEN THE ANGLE Ø BETWEEN THE LEGS IS		
	0°<Ø>30°	30°<Ø>60°	60°<Ø>90°
TONNES	TONNES	TONNES	TONNES
0.25	0.32	0.20	0.13
0.40	0.50	0.32	0.20
0.80	1.00	0.64	0.40
1.60	2.00	1.25	0.80
2.50	3.20	2.00	1.25
4.00	5.00	3.20	2.00
6.30	8.00	5.00	3.20

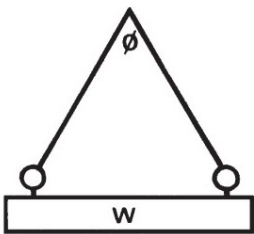


Collared with straight links

MAXIMUM RECOMMENDED WORKING LOADS FOR BRITISH STANDARD COLLAR EYEBOLTS WITH LINKS WHEN USED IN PAIRS FOR INCLINED LOADING CONDITIONS

SAFE WORKING LOAD FOR A SINGLE EYEBOLT IN VERTICAL LIFT	MAXIMUM LOAD 'W' TO BE LIFTED BY A PAIR OF EYEBOLTS WHEN THE ANGLE Ø BETWEEN THE LEGS IS		
	0°<Ø>30°	30°<Ø>60°	60°<Ø>90°
TONNES	TONNES	TONNES	TONNES
1.00	2.0	1.6	1.25
1.25	2.5	2.0	1.6
1.60	3.2	2.5	2.0
2.00	4.0	3.2	2.5
2.50	5.0	4.0	3.2
3.20	6.3	5.0	4.0
4.00	8.0	6.3	5.0
5.00	10.0	8.0	6.3
6.30	12.6	10.0	8.0

NB. Dynamo Eyebolts are to be used for vertical lift only. If fitted in pairs or groups a spreader frame must always be used.

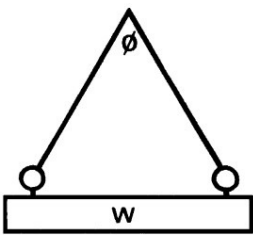

FOR TRUNNION LIFTING

The load taken by a single eyebolt should not exceed 63% of its marked SWL.